
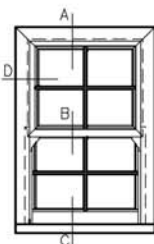



SMALL SASH & LARGE SASH (EQUAL SPLIT)

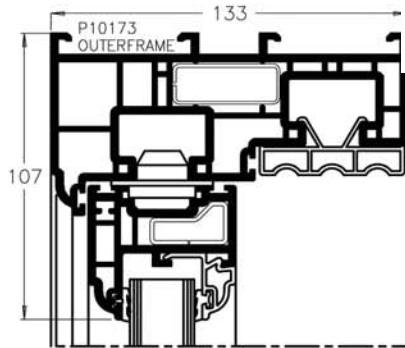


TO CALCULATE FINISHED SASH HEIGHTS.  
TOP & BOTTOM SASH HEIGHT =  
 $\frac{\text{OVERALL FRAME HEIGHT} - 97\text{mm}}{2} + 24\text{mm}$

TO CALCULATE FINISHED SASH WIDTHS.  
TOP SASH WIDTH =  
OVERALL FRAME WIDTH - 116mm

BOTTOM SASH WIDTH =  
OVERALL FRAME WIDTH - 90mm

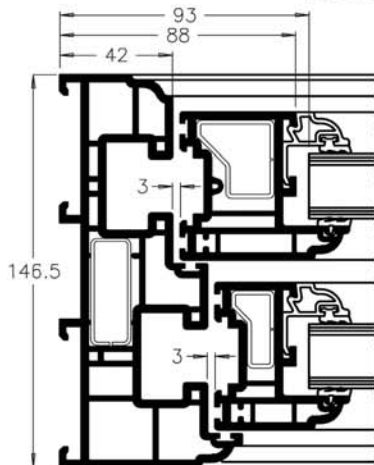

SECTION D  
P10153  
OUTERFRAME

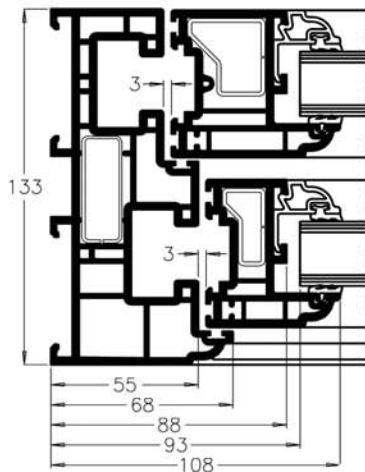

SECTION D  
P10173  
OUTERFRAME

